

- Release the slide stop.
- Point the weapon at a safe backstop and pull the trigger to verify that the unit is properly installed and functioning.



Disassembly:

- Remove the magazine if in place.
- Retract the action/slide and engage the slide stop as in Step 3 of the assembly procedure.
- Press gently on the back of the Laser cartridge with your finger and unscrew the Safety Nut from the Safety Pipe.
- Unscrew the Safety Pipe and remove from the barrel.
- Point the barrel up, while positioning your hand, palm upward, under the magazine well.
- If necessary, shake the weapon, and the laser cartridge will slide out through the magazine well.

Remove battery when laser cartridge is not in use.

Maintenance:

The Laser cartridge is an electronic device and should always be treated as such.

- Store in original case.
- Wipe the Laser cartridge only with a soft fabric - do not immerse in solvents or cleaning agents.
- Clean the laser lens using a glass cleaner and cotton swab.

Please note: If you are using the SureStrike in multiple firearms which have substantially different firing pin strengths, you may need to use a different Action Cap for each firearm.

Warranty:

Laser Ammo warrants that this product shall be free from material defects and defects in workmanship for the earlier occurrence of: A period of one (1) year from the date of the purchaser's receipt of the product, or; 5000 laser "shots". Notice of any warranty claim must be received by Laser Ammo, in writing, prior to the expiration of the warranty period.

Laser Ammo's warranty is limited solely to the above and applies only for the period set forth. Laser Ammo will not be liable for any loss, damage, direct, incidental or consequential damages of any kind, whether based upon warranty, contract, negligence, or strict liability, or arising in connection with the sale or use of the product by the user or any third party. Laser Ammo's warranty does not cover any damage to the product that results from improper installation, accident, abuse, misuse, natural disaster, insufficient or excessive

electrical supply, abnormal mechanical or environmental conditions, or any unauthorized disassembly, repair, or modification. This limited warranty does not apply to any product on which the original identification information has been altered, obliterated or removed. Laser Ammo will, at its sole option, either repair or replace any part of the product that proves defective by reason of improper workmanship or materials. In all events, Laser Ammo's maximum liability to the purchaser related to any warranty claim or defect with respect to the product shall not exceed the contract price for the specific product claimed to be defective or unsuitable, or alleged to have been the cause of any damage to the purchaser or any third party. The foregoing is in lieu of all other warranties, oral, expressed or implied, including, but not limited to, any implied warranties of fitness for a particular purpose. The provisions of this section shall be applicable to both implied warranties (if any) and expressed warranties.

Step 8

Disassembly

Maintenance

Warranty

Warranty


www.laser-ammo.com

User Guide

User Guide


SureStrike™

Laser Cartridge







LASER AMMO
TRAINING TECHNOLOGIES

Product of Laser Ammo USA Inc.
Phone: 516-858-1262 (U.S.)



Dry fire training system

- 
SAFETY
- 
ACCURACY
- 
FIRING PIN
ACTIVATED
- 
NO VIBRATION
SENSITIVITY

 
- Unload the weapon.
- Physically and visually inspect chamber, bore, and magazine well to ensure that all ammunition has been removed.
- Unload ammunition from any magazines that will be used in training.
- Store ammunition in an area that is separate from your training area.

⚠ Always personally verify that all ammunition has been removed before training.


Do not allow any live ammunition in the training area.

Warning - firearms can cause serious injuries or death.


- Unscrew the Laser cartridge and insert the battery pack into the Laser cartridge according to the drawing (flat side facing up).
- Reassemble the Laser cartridge carefully.
- Verify the threading is fully closed and that there is no gap.

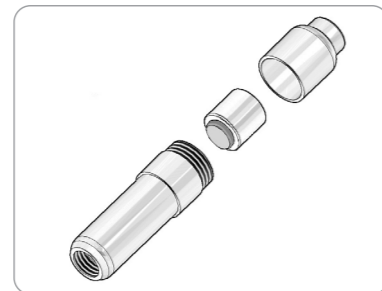

 
- Retract the action/slide and engage the slide stop in the open position.
 - Make sure the action/slide is held firmly by the stop.
- ⚠** Do not continue if the slide is not held firmly or if the slide stop is not in good working order.

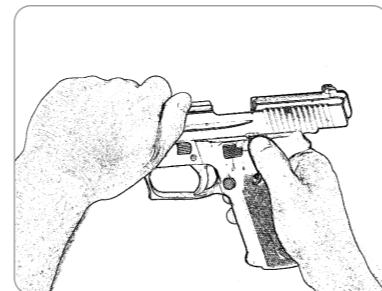

 
- While pointing the barrel down, insert the Laser cartridge into the handgun by "dropping" it, laser first, through the slide opening into the chamber.

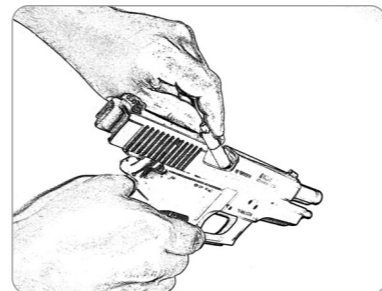

 - For barrel length between 2.8" to 4.1" continue to step 6.
- For a longer barrel, connect the pipe extension to the Safety Pipe by threading them together tightly.
- If needed, a long safety pipe (up to 4.7") or additional extensions are available from Laser Ammo.

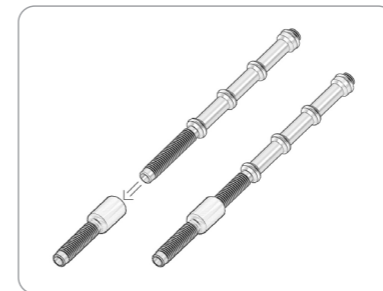

 - Press gently on the back of the Laser cartridge with your finger.
- Carefully insert the Safety Pipe's short threaded end into the barrel.
- Screw the Safety Pipe into the Laser cartridge until you feel mild resistance.

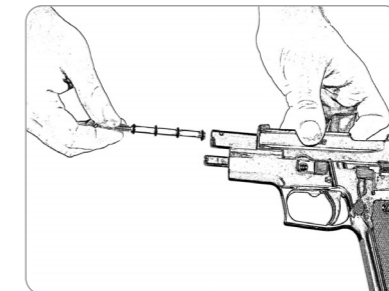

- Screw the Safety Nut onto the Safety Pipe, until it tightens against the barrel. Please note the safety nut can be reversed for a longer reach.



Step 1

Step 2

Step 3

Step 4

Step 5

Step 6

Step 7