

Instructions

Step 1 - Safety

- Unload the weapon
- Physically and visually inspect the chamber, bore, and magazine well to ensure that all ammunition has been removed.
- Store ammunition in an area that is separate from your training area.

⚠ Always personally verify that all ammunition has been removed before training.

Do not allow any live ammunition in the training area.

Step 2 - Instillation

- 1 - Open the Shotgun Adapter by unscrewing the adapter cap. Insert the Laser Bullet into the body of the adapter and reassemble the Adapter by screwing the cap back on and tightening gently.
 - It is recommended to lightly lubricate the Adapter's O ring before use.
- 2 - Open the chamber of the shotgun, insert the Shotgun Adapter as you would insert a single cartridge.
 - Using your finger or the back end of a pencil, rotate the adaptor and align the groves on the adaptor's cap to be positioned in the chamber so that that the weapon's extractor will NOT come in contact with the adaptor while cycling.

Step 3 - Removal

- 3 - Open the chamber.
 - 4 - Using your finger or the back end of a pencil, rotate the Shotgun Adapter by pushing the grooves on the adaptor's cap until it is aligned in the chamber so that the weapon's extractor WILL come in contact with the adaptor's rim.
- Cycle the weapon over a soft surface to eject the adaptor.
 - Remove the Laser Bullet from the adaptor.
 - Remove the battery from the laser cartridge when not in use.



1



2



3



4

Full set of video instructions is available at:
www.laser-ammo.com